


JONAS


Never use power tools unless instructed.

You will need a rubber mallet and a crosshead screw driver



Lucio

Assembly Instructions
Jonas Chair

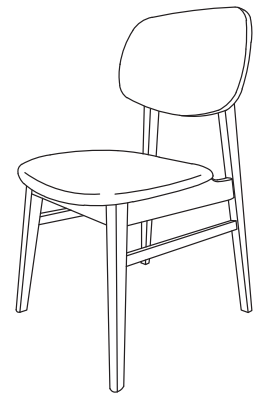

Before assembly please check you have all parts listed below.
Please assemble on a clean and flat surface, such as carpet or cardboard to prevent scratches (do not assemble on your floor). PLEASE NOTE: We've tried to make this chair as easy to assemble as possible. In the unlikely event you have problems putting it together or missing pieces, please contact us. Details below.

PARTS LIST

| | | | | |
|------------------------------------|--|--|--|--|
| A legs left & right | B backrest X 1 | 1 JCBC SCREW M6 X 50MM (RB) X 8 | 2 JCBC SCREW M6 X 40MM (RB) X 2 | 3 JCBC SCREW M6 X 30MM (RB) X 2 |
| | C front rail X 1 | D back rail X 1 | 4 SPRING WASHER 5/16" (RB) X 12 | 5 FLAT WASHER 6 X 13MM X 6 |
| E seat X 1 | 8 WOOD DOWEL M10 X 30MM X 8 | 9 ALLEN KEY M4 (BALL SHAPE) X 1 | 10 WOOD BUTTON X 4 | 7 PH SCREW 5 X 32MM (BLK) X 4 |

STEP 1 You will need:
 part no. A legs X 2
 part no. C rail X 1
 part no. D rail X 1
 part no. 8 dowel X 8

STEP 2
 Lay one leg flat, add parts C and D
 Add the other leg. Push together firmly.

STEP 3
 You will need:
 part no. 1 screw X 4
 part no. 4 spring washer X 4
 part no. 6 screw pin X 4

STEP 6
 You will need:
 part no. 7 screw X 4

STEP 4
 Screw seat to frame.
 You will need:
 part no. E seat X 1
 part no. 1 screw X 2
 part no. 4 spring washer X 2
 part no. 5 flat washer X 2

STEP 5
 You will need:
 part no. 2 screw X 2
 part no. 3 screw X 2
 part no. 4 spring washer X 4
 part no. 5 flat washer X 4
 part no. 10 wood button X 4

Exclusively distributed in AU and NZ by Chairforce.
 Thank you for your purchase. To learn more about our products please visit www.chairforce.com.au and www.chairforce.co.nz
 AU: Call: 08 9436 8570 Email: customer@brayco.com.au
 NZ: Call: 09 271 5000 Email: sales@chairforce.co.nz