

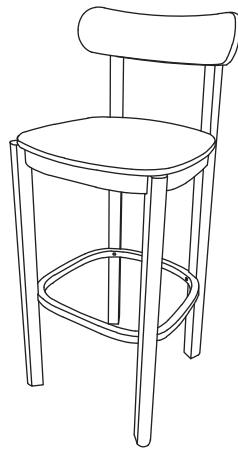
## Assembly Instructions

### Leon Stool









Before assembly please check you have all parts listed below.

Please assemble on a clean and flat surface, such as carpet or cardboard to prevent scratches (do not assemble on your floor). PLEASE NOTE: We've tried to make this stool as easy to assemble as possible. In the unlikely event you have problems putting it together or missing pieces, please contact us. Details below.



## PARTS LIST
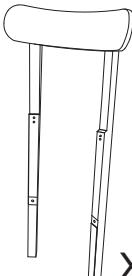
<b>A</b> backrest  X 1	<b>B</b> seat  X 1	<b>D</b> footrest  X 1	<b>1</b> JCBC BOLT M6 X 60MM (RB)  X 8	<b>2</b> SPRING WASHER 5/16" (RB)  X 8	<b>3</b> FLAT WASHER M8 X 18MM (RB)  X 8
<b>C</b> front legs (left & right)  X 2	<b>4</b> WOOD DOWEL M10 X 30MM  X 2	<b>5</b> PH M4 X 32MM (BLK)  X 4	<b>6</b> ALLEN KEY (M4) (BALL SHAPE)  X 1		

## STEP 1

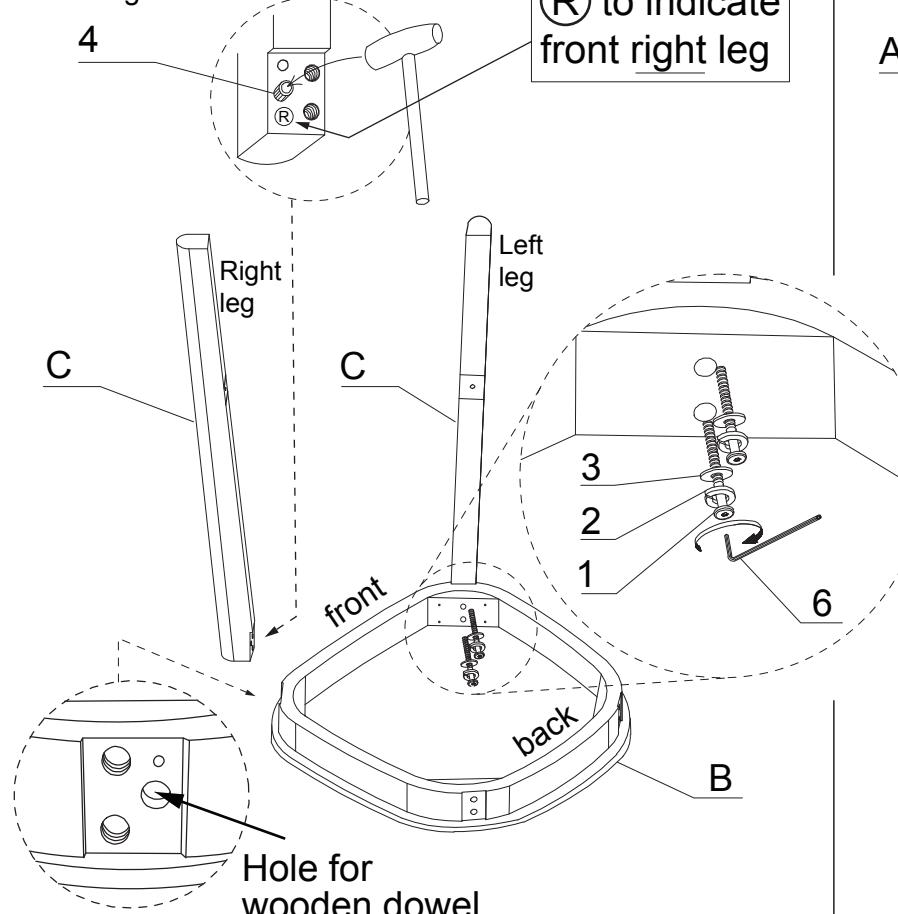
Attach front legs to seat.

NB: front of seat is wider than the back.

Attach 1 wood dowel to each leg

Push legs onto seat.


Screw legs to seat.



## STEP 2


Repeat for backrest

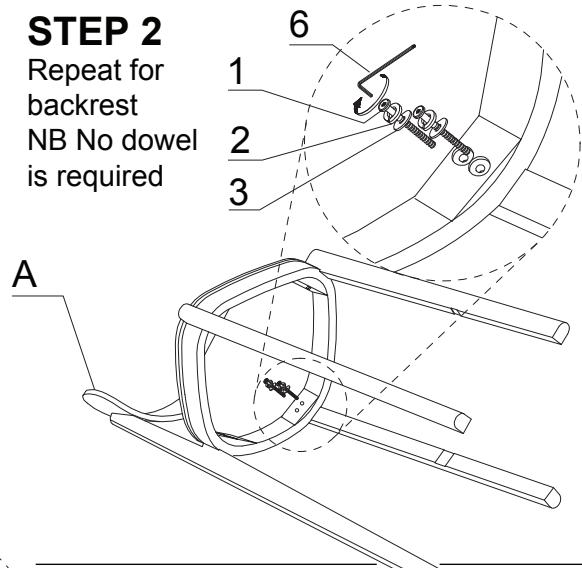NB No dowel is required



## STEP 3
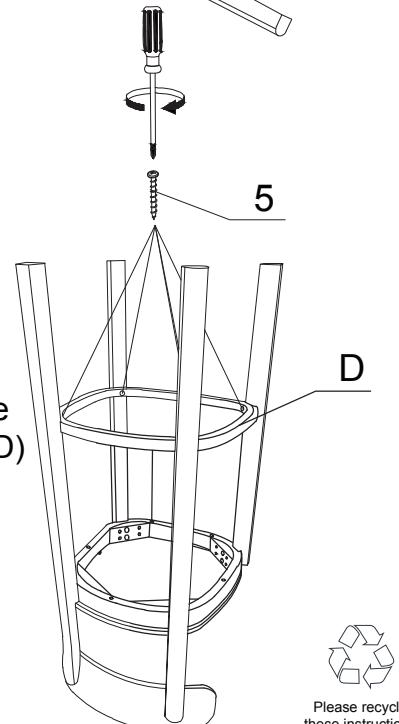
### Attach the footrest (D)



Exclusively distributed in AU and NZ by Chairforce.

Thank you for your purchase. To learn more about our products please visit [www.chairforce.com.au](http://www.chairforce.com.au) and [www.chairforce.co.nz](http://www.chairforce.co.nz)

AU: Call: 08 9436 8570

Email: [customercare@brayco.com.au](mailto:customercare@brayco.com.au)

NZ: Call: 09 271 5000

Email: [sales@chairforce.co.nz](mailto:sales@chairforce.co.nz)



Please recycle these instructions