


OSCABS
OSCACS



You will need
a rubber mallet and a crosshead
screw driver

lucio


Assembly Instructions Oscar Stool

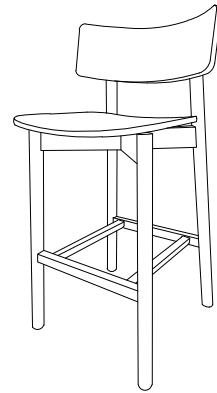

Before assembly please check you have all parts listed below.


Please assemble on a clean and flat surface, such as carpet or cardboard to prevent scratches (do not assemble on your floor). PLEASE NOTE: We've tried to make this stool as easy to assemble as possible. In the unlikely event you have problems putting it together or missing pieces, please contact us. Details below.

PARTS LIST

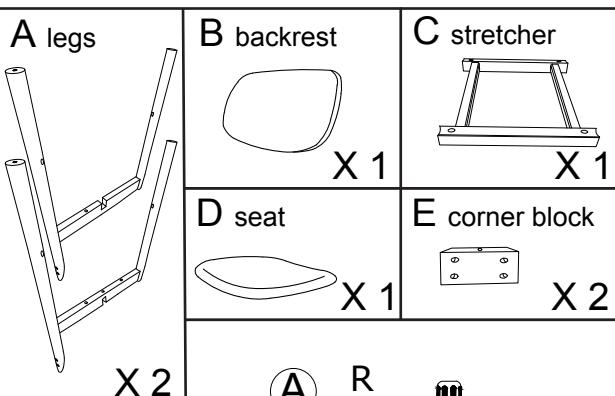


1 JCBC SCREW M6 X 70MM X 4	2 JCBC SCREW M6 X 60MM X 4	3 JCBC SCREW M6 X 40MM X 2
4 JCBC SCREW M6 X 25MM X 2	5 SPRING WASHER 5/16" X 8	6 FLAT WASHER 6 x 12 X 8
8 WOOD DOWEL M10 X 30MM X 2	9 ADJUSTABLE FOOT X 4	7 PH M4 X 32MM X 11
10 ALLEN KEY M4 (BALL SHAPE) X 1		


STEP 1

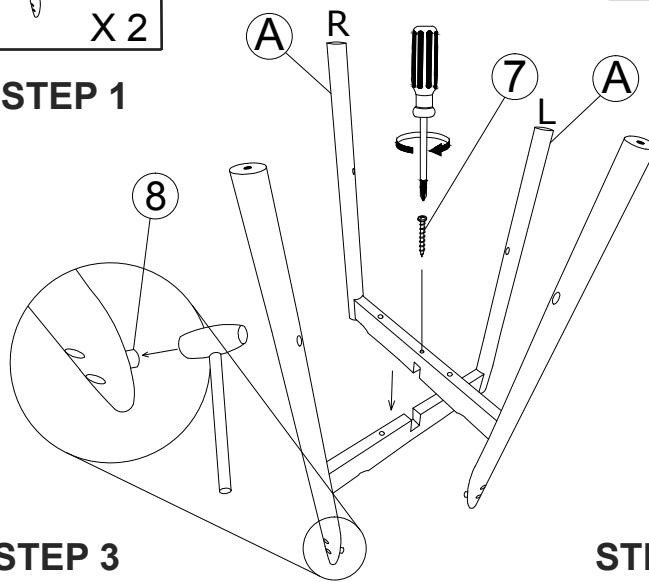


STEP 2

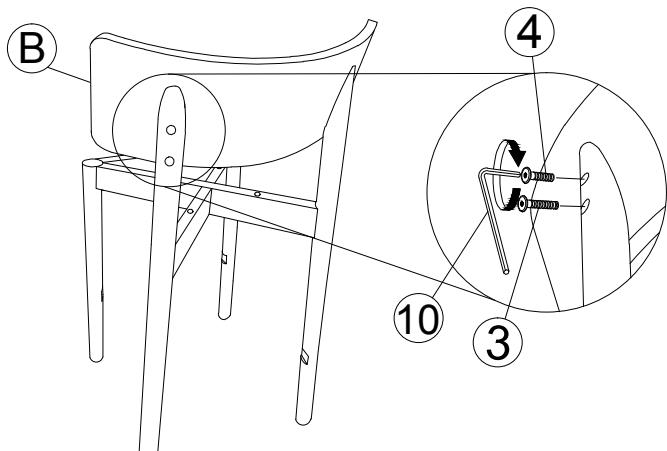


STEP 3

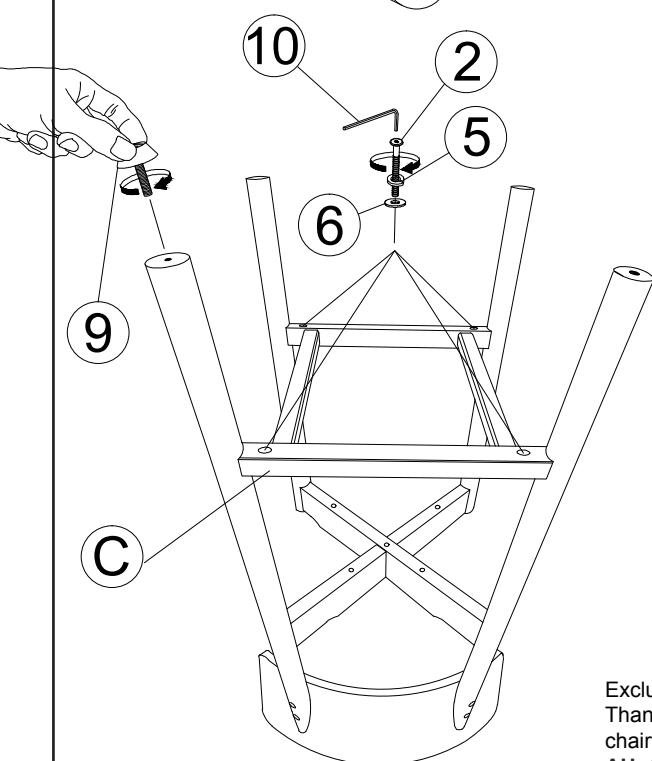

STEP 4

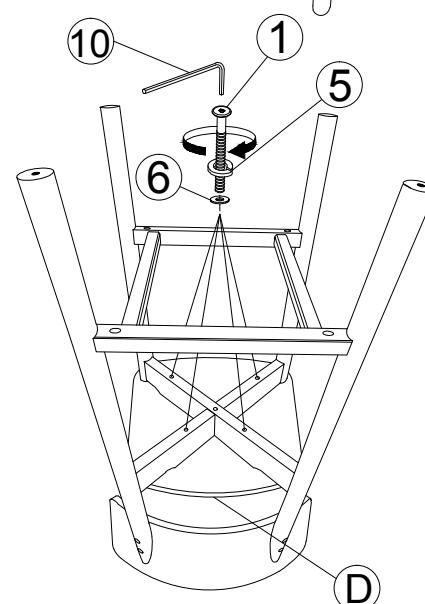

STEP 5

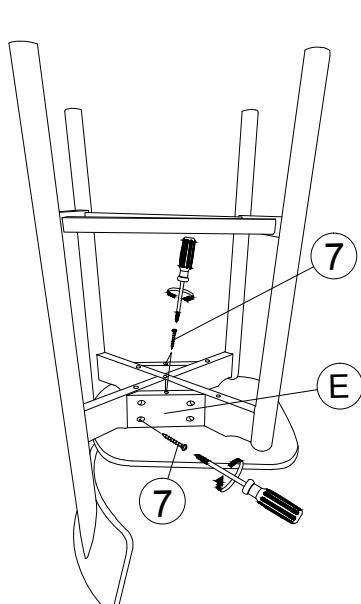

Exclusively distributed in AU and NZ by Chairforce.

Thank you for your purchase. To learn more about our products please visit

chairforce.com.au

chairforce.co.nz

AU: Call: 08 9436 8570

NZ: Call: 09 271 5000

Email: customercare@brayco.com.au

Email: sales@chairforce.co.nz



Please recycle
these instructions